

# PLASTIC DIFFUSERS AND GRILLES STREEMLINE - INSTALLATION, ADJUSTMENT AND CARE

AdvantageAir

## INSTALLATION

1. Mark out the hole in the ceiling as follows:

SL2WS	295mm x 155mm
SL30	295mm x 295mm
SL2WL	375mm x 195mm
SL40	375mm x 375mm
SL54	375mm x 555mm
SSRV	375mm x 555mm

2. Cut out hole in ceiling

3. Remove the four biscuits from the grille frame and place to one side. Ensure the holes in the grille frame and neck adaptor line up and clip neck adaptor onto grille frame.

4. Hold grille/neck adaptor assembly in position in the hole in the ceiling and push plastic clips through holes on the side of the grille frame (see fig A).

5. Apply maximum pressure to the top of each clip to ensure the frame is pulled tightly up to the ceiling.

A screwdriver can be used to push the clip to its final position.

6. After the grille/neck adaptor frame is securely and satisfactorily positioned carefully install the four biscuits.

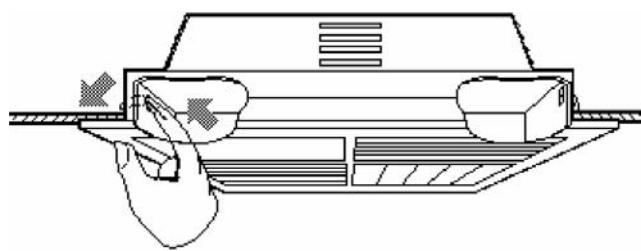


FIG. A

## ADJUSTMENT AND CARE

7. Rotate biscuits to suit required direction of throw as indicated in fig B.

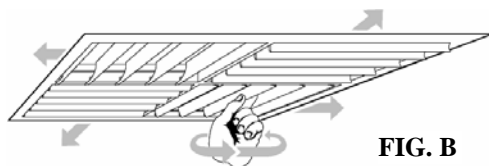


FIG. B

8. Ensure each biscuit is firmly clipped into grille frame by applying pressure on top or the biscuit frame as indicated in fig C.

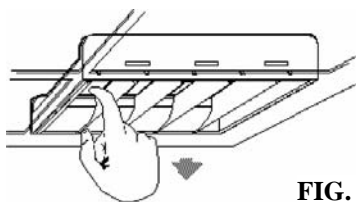


FIG. C

9. Click blades into required position as indicated in fig D.

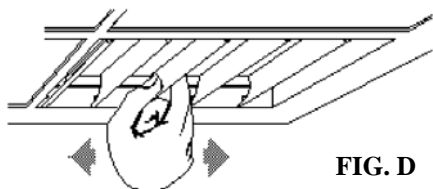


FIG. D

10. For total shut off (if required) use a bent paper clip on the last blade in each biscuit to pull the blades into their fully close position as indicated in fig E. Pull the paper clip out through the gap between the last blade and the biscuit frame.

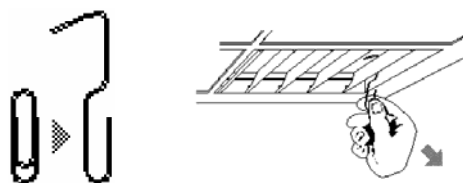


FIG. E

11. To open a shut off diffuser after winter place a broad blade knife between the diffuser blades as indicated in fig F. Set to the required position as indicated under item 9.

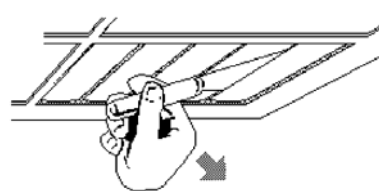


FIG. F

12. To clean grilles remove cores and wash in warm soapy water. Wipe down frame. Do **NOT** place cores in dishwasher.

13. Please recycle all packaging



### No liability

Make sure you read and understand all the installation instructions before you install this Linear Elite diffuser. Advantage Air (Aust) Pty Ltd does not accept any responsibility for any loss or damage that may be caused either directly or indirectly by the installation of this Linear Elite diffuser.